




Installation Guide

Wireless-N Gigabit Router with USB WNR3500L


Package Contents:




Resource CD

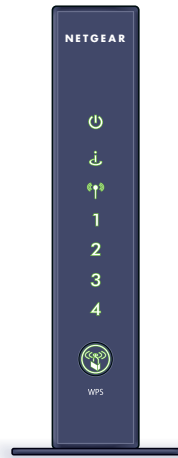

Wireless-N Gigabit Router

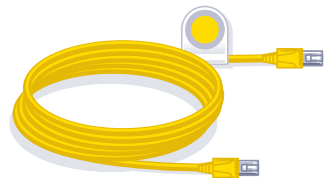

Ethernet Cable

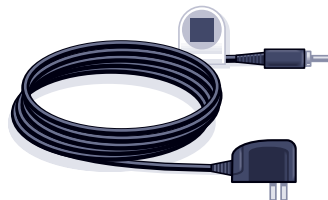

Power Adapter


Step 1: Connect your modem.



Internet



DSL or Cable

CAUTION:
MAKE SURE YOUR MODEM IS
TURNED OFF OR UNPLUGGED
BEFORE STARTING THE
INSTALLATION.

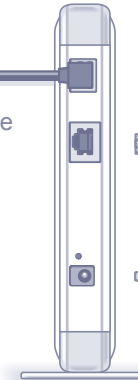

Modem

 Step 2: Connect your router.

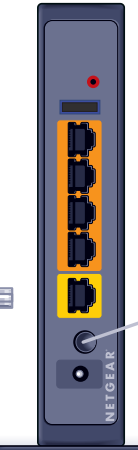

Wireless-N Gigabit Router

(not included)

Power on/off



Laptop or Desktop
Computer



Resource CD

Step 4: Power on your modem. Wait until your modem cycles on (approximately 2 minutes).

Note: If you have a battery-backed modem,
press the reset button. (In some cases, you may
need to remove, then re-insert, the battery to recycle
your modem.)

Step 5: Power on your router. Wait until the power LED turns solid green.

Step 6: Insert your CD. Click **Router Setup** and follow the steps to set up a secure wireless network.

Note: If your laptop does not have a
CD drive, see **"No CD Drive" Installation**
on the back to complete your router setup.